



# GT86

## Front & Rear Set Mudflaps











Installation instructions


Model year: 04/2012  
Vehicle code: ZN6-AKE\*, ZN6-ALE\*  
Part number: PU060-18013-P1








Manual reference number: AIM 002 554-0





# Revision Record


Rev. No.	Date	Page	Picture	Update	New	Deleted

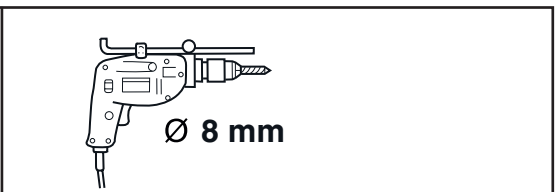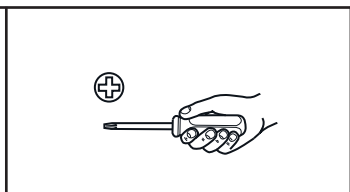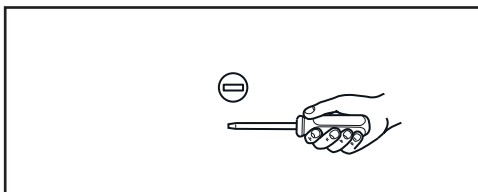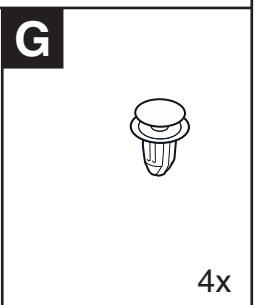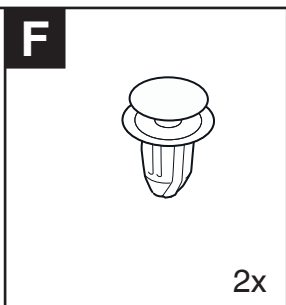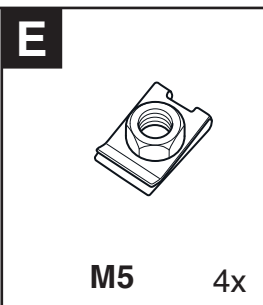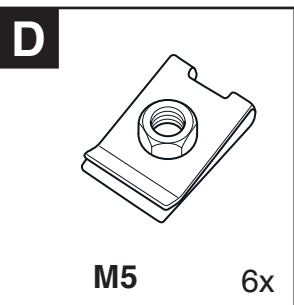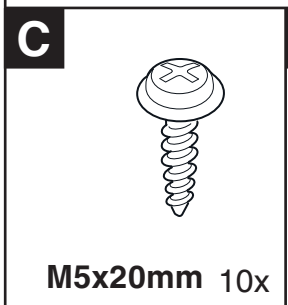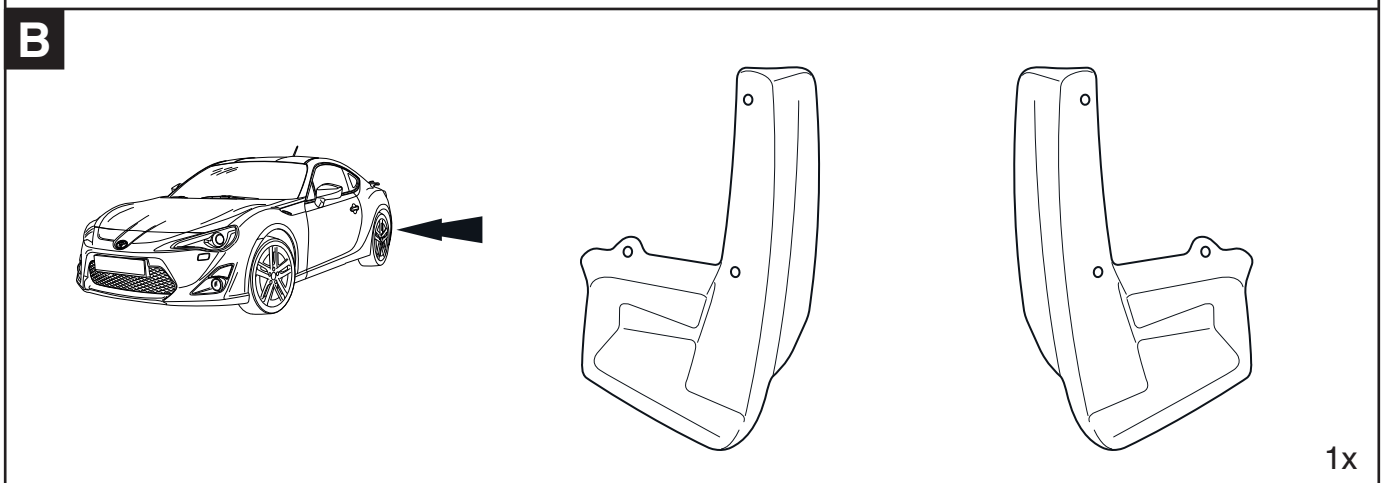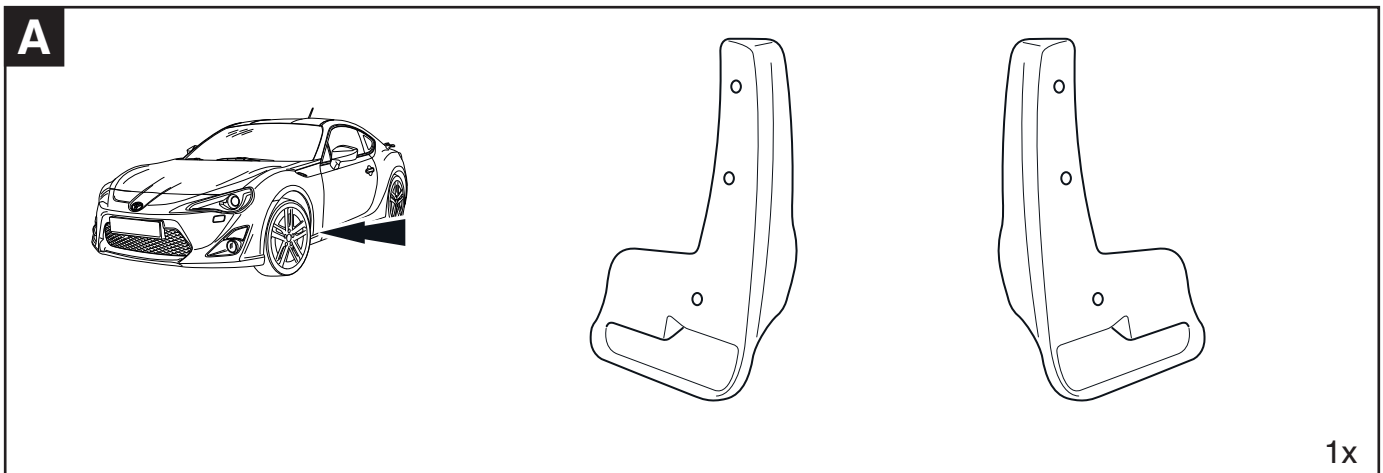

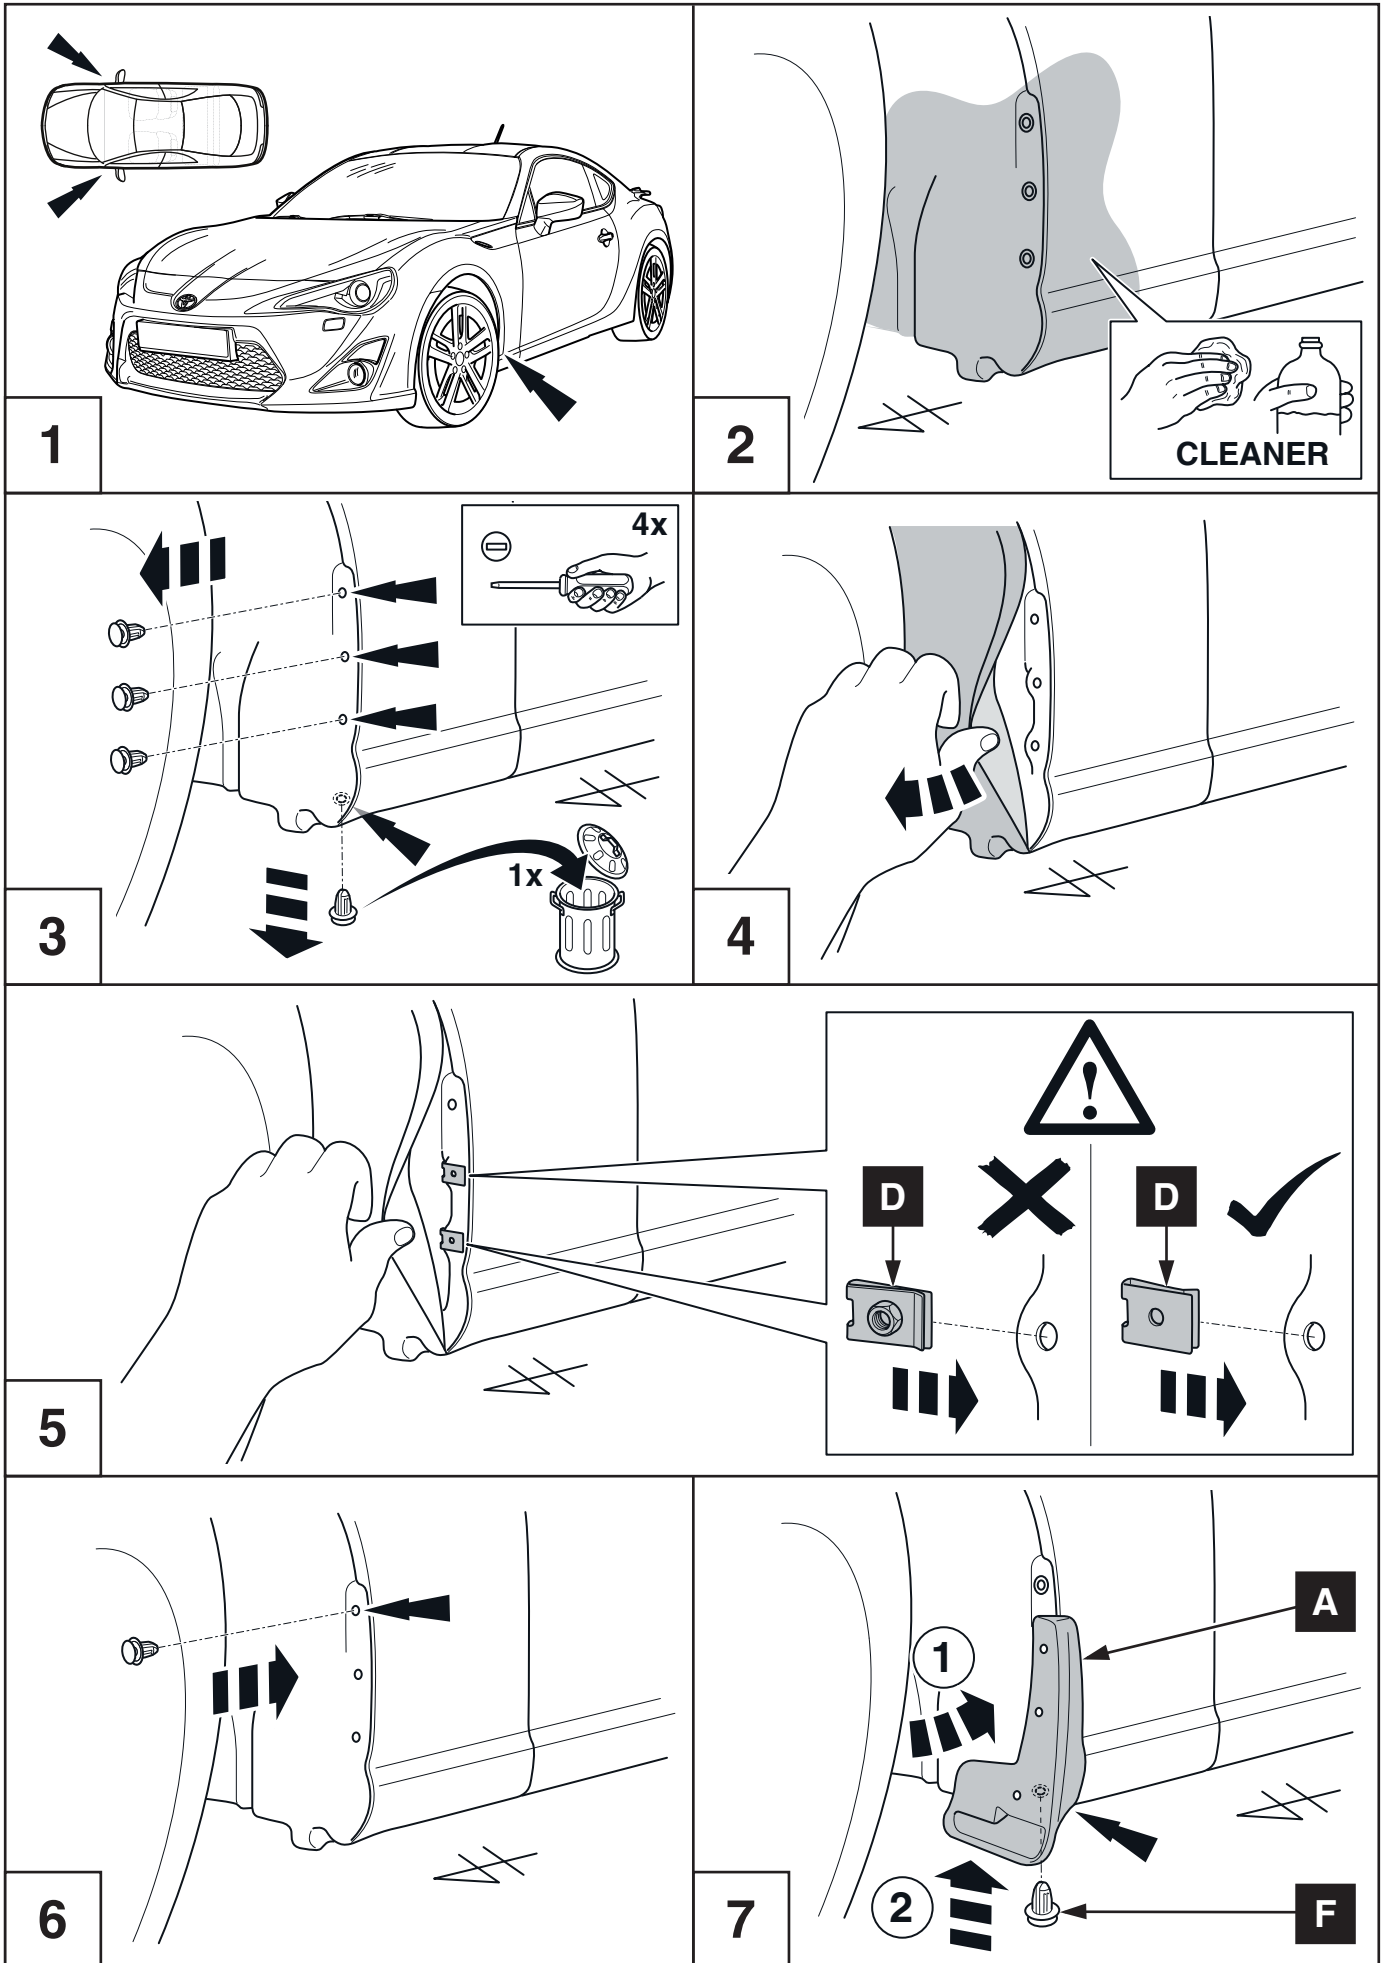

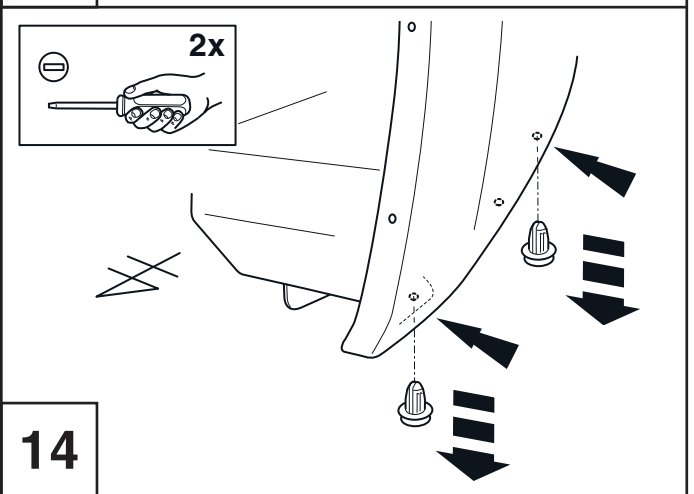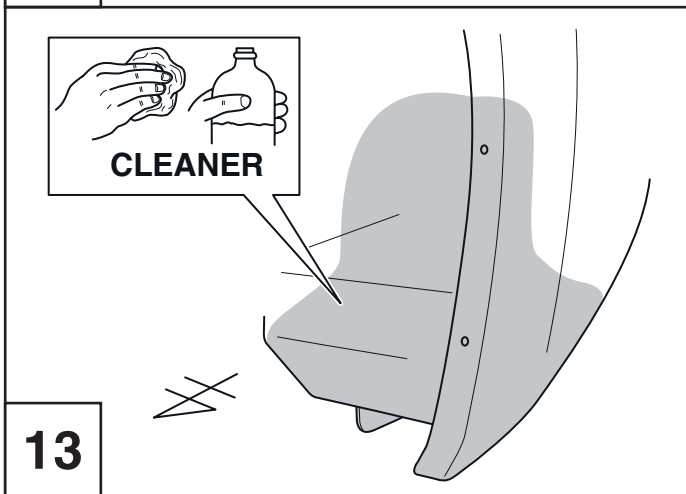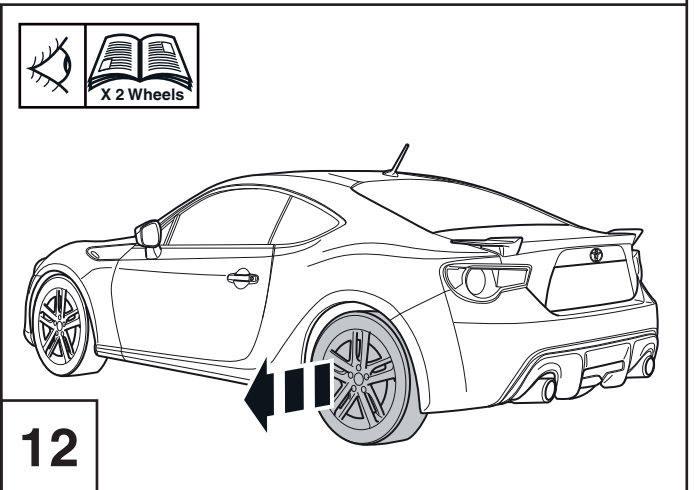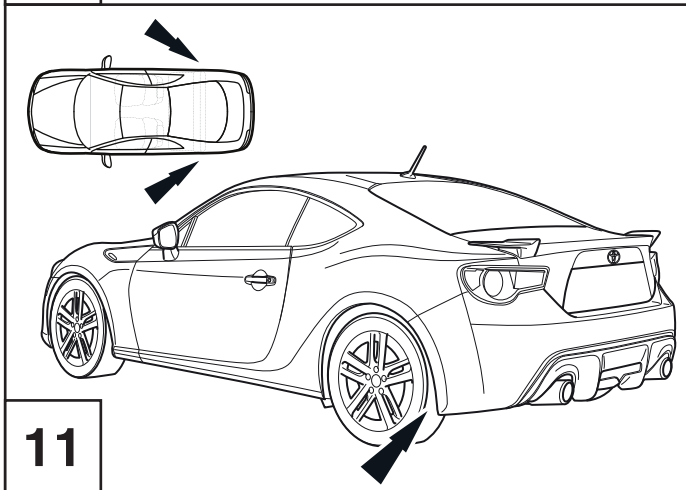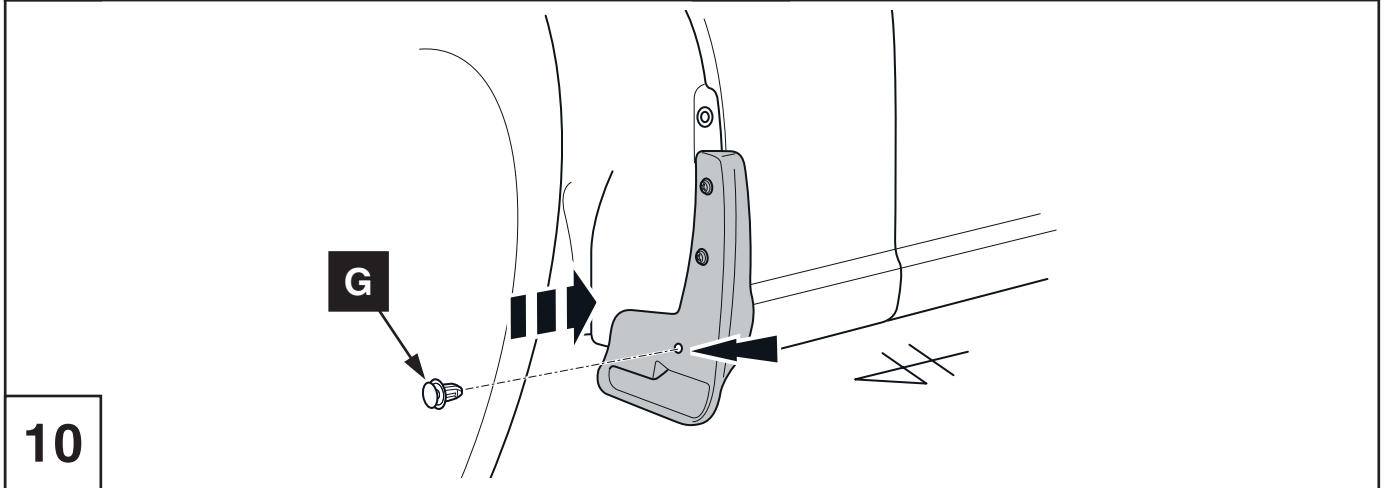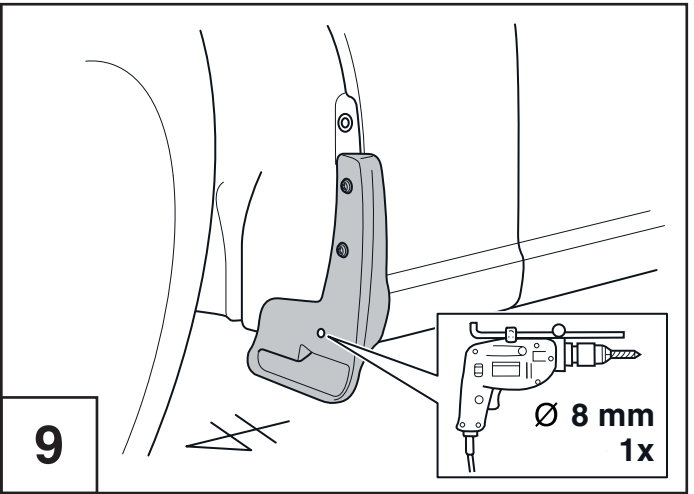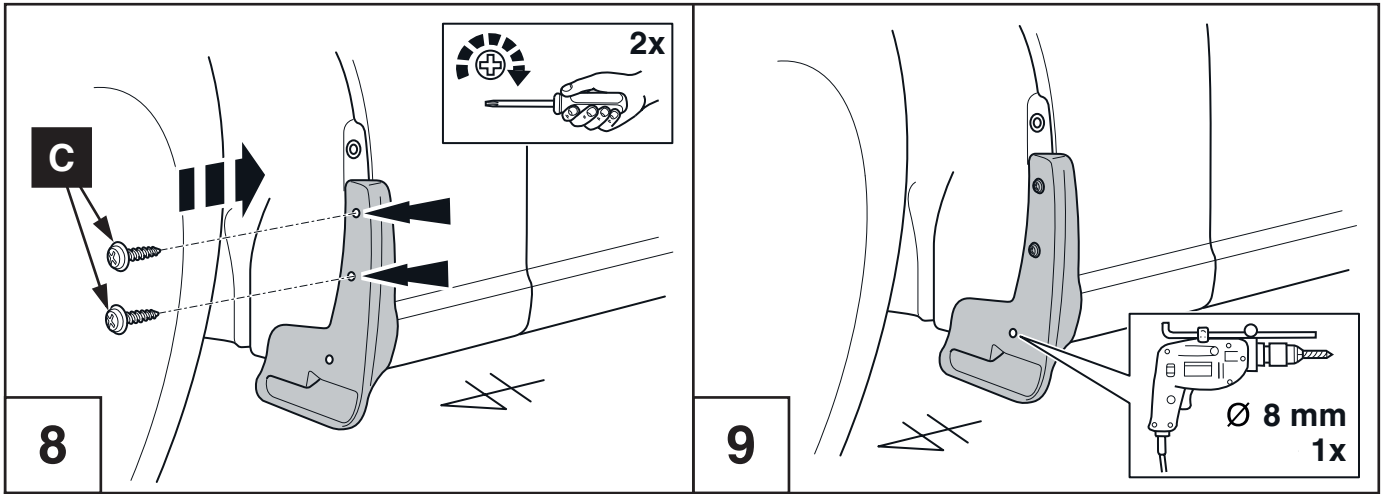

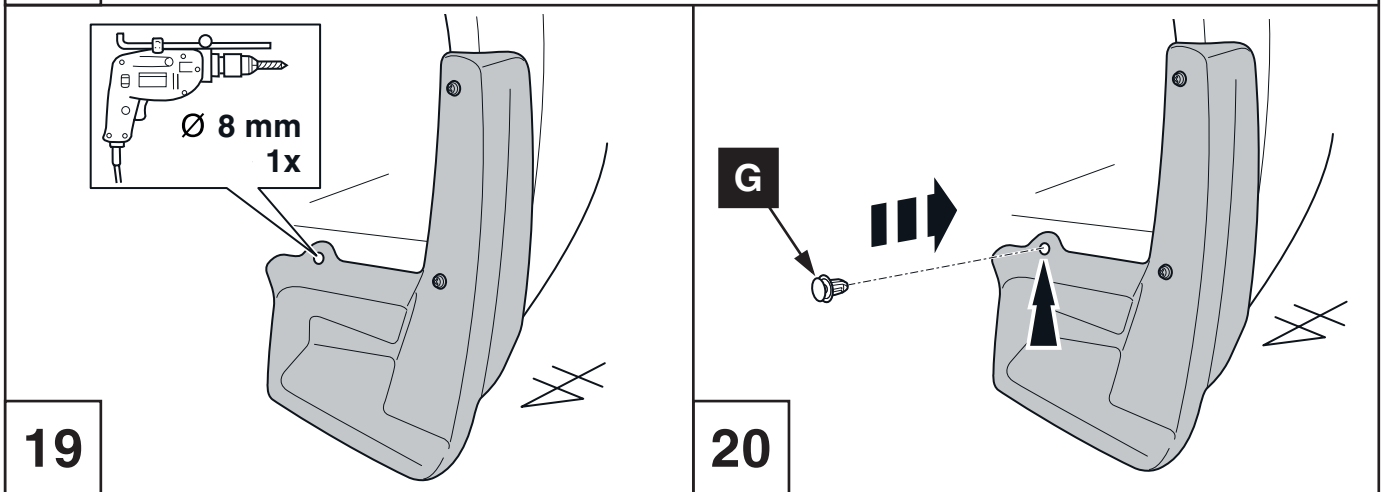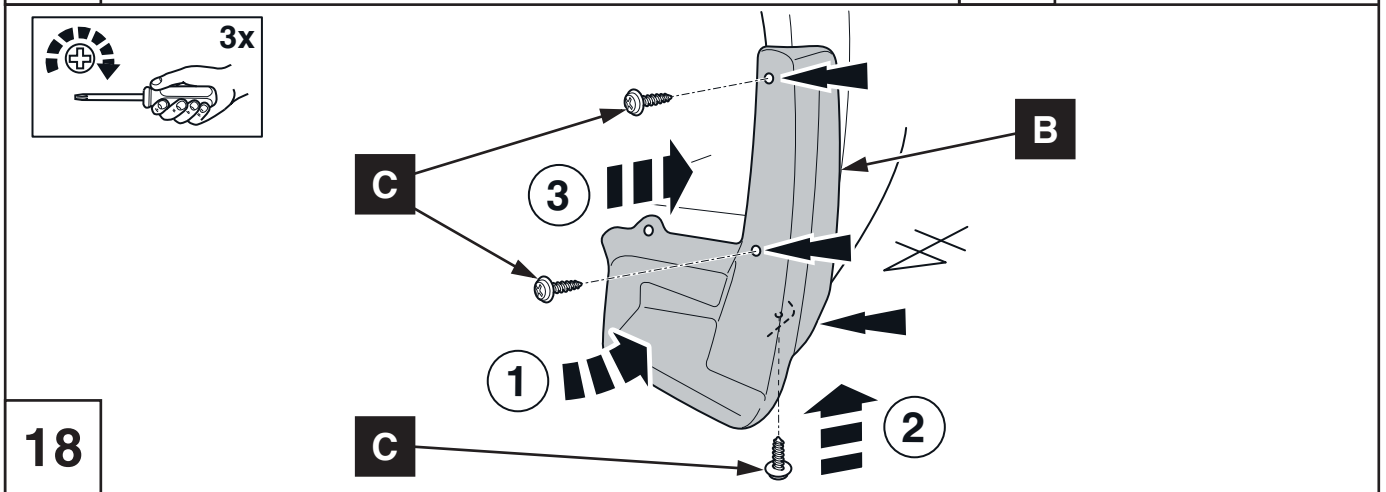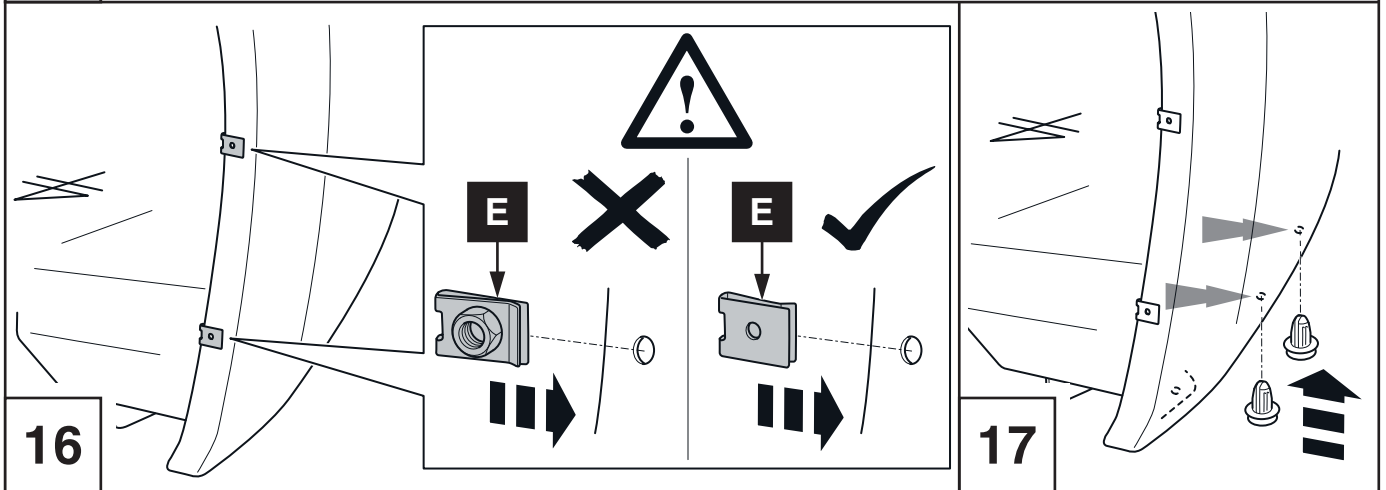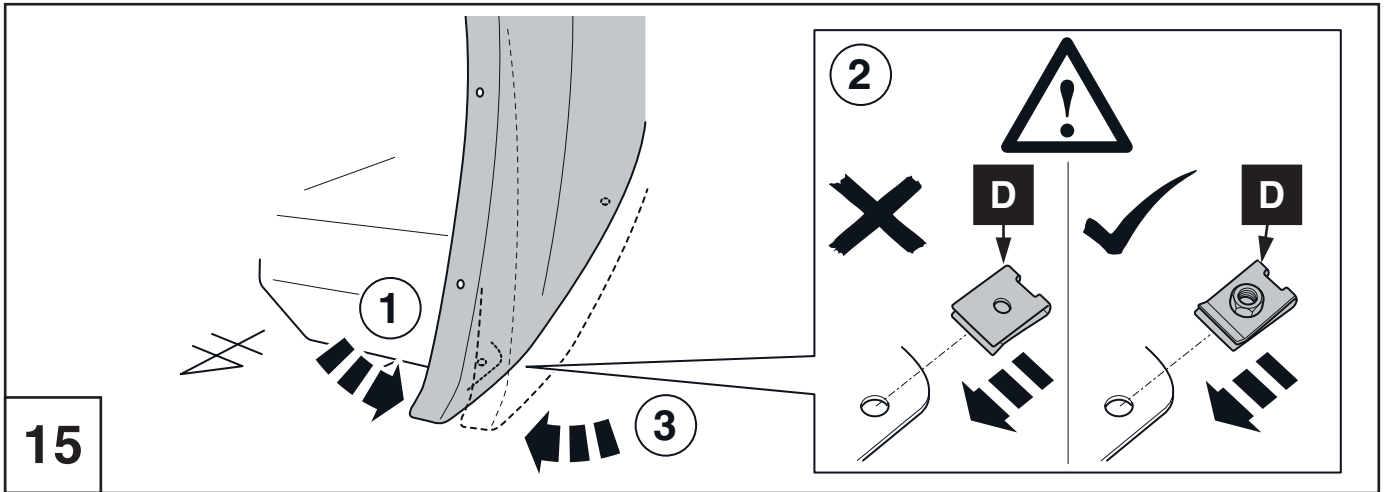

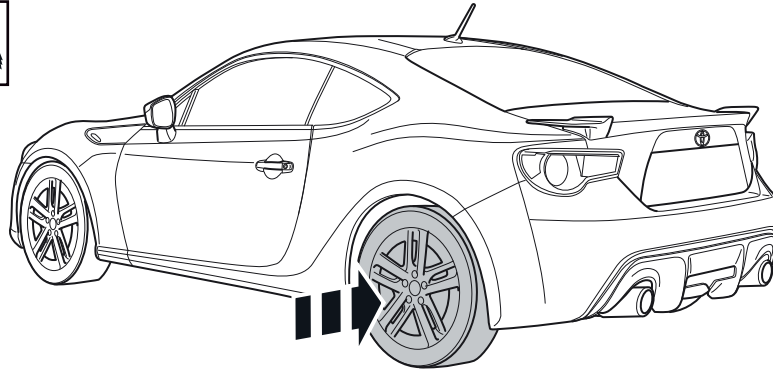

21